

Technical Reference Manual CALIS

Firmware V3.x

Revision: A
Date: 2024-12-19

Contents

Introduction.....	3
IO-Link Interface.....	4
Device Variants.....	4
Communication Interface.....	5
Process Data.....	6
Process Data Input.....	6
Process Data Output.....	6
Events.....	7
Commands.....	7
ISDU Indices.....	8
Identification.....	8
Parameter.....	9
Measurement Configuration.....	9
Container Teach In.....	9
Pin 4 Configuration.....	10
LED.....	11
Observation.....	11
Diagnosis.....	11
Device Status Information.....	11
Self-Diagnosis and Errors.....	13
References.....	14
Revision History.....	14
Rev. A – 2024-05-28.....	14
Legal notice.....	15
Trademark.....	15

Introduction

CALIS Level Sensors can be used in IO-Link and non-IO-Link environments.

For non-IO-Link usage, the sensor features up one digital output that switch on at a certain fill level and one analog current output, whose value scales continuously with the fill level.

The related parameters can be configured before/during deployment via IO-Link:

- Container teach-in with 2 to 6 reference points
- Set point of the digital output

If the sensor detects IO-Link communication, it automatically switches to the IO-Link communication mode. The IO-Link standard offers different communication mechanisms:

- Acyclic Data (Indexed Service Data Units): Used to configure basic settings during commissioning.
- Cyclic Process Data: Used to receive the sensor's state and influence its behavior during runtime.
- Events: The sensor will report events in case of error.

In IO-Link applications the fill level is provided via cyclic Process Data for processing by a PLC.

Process Data, ISDUs and events of the sensor, their respective numeric indices, offsets, and values, are described in the IODD file of the sensor. It is highly recommended to use this file when integrating the sensor in an application.

IO-Link Interface

IO-Link Specification: V1.1.3 (June 2019)

Vendor ID	1239
Device Family	CALIS series
Device Name	CALIS Level Sensor
Device ID	2305
IODD	https://ioddfinder.io-link.com/productvariants/search?vendorName=%22CAPTRON%20Electronic%20GmbH%22&deviceId=2305

Device Variants

Product ID	Name	Description
CAS-MQEU-M01	CALIS Level Sensor	ToF Level Sensor with M22 flange and M12 connector

Communication Interface

IO-Link Version	V1.1
Bitrate	COM2
Minimum Cycle Time	14800 μ s
Process Data Input Bits	64
SIO Supported	Yes
ISDU Supported	Yes
Data Storage	Yes
Block Parameter	Yes
Supported Profiles	FW-Update (49)

Process Data

Note: IO-Link Bit Offset counts from the last byte of the data array.

Process Data Input

64 bit / 8 byte

Byte	0	1	2	3	4	5	6	7
Bit Offset			40	32		16		0
Data	reserved			Pin 4	Distance (mm)		Fill Level (%)	

Bit Offset	Name	Datatype	Values	Info
0	Fill Level	16-bit IntegerT	-32768 ... 32767 [0.01 %]	Fill level in 0.01% (-327.68 % ... +327.67 %)
16	Distance	16-bit UIntegerT	0 ... 65535 [mm]	Measured distance in mm
32	Pin 4	8-bit UIntegerT	0 - Output - OFF 1 - Output - ON	State of digital output on Pin 4 (whether fill level is greater than set point)

Process Data Output

none

Events

Event Code	Type	Definition and recommended maintenance action
6144	Error	Output Overload - Output current too high - max. 200 mA
16912	Warning	Device temperature overrun - Clear source of heat
20496	Error	Component malfunction - Repair or exchange
20752	Warning	Primary supply voltage overrun - Check valid voltage range
20753	Warning	Primary supply voltage underrun - Check valid voltage range
25376	Error	Parameter error - Check datasheet and values

Commands

ISDU Index 2 - System Command

Value	Name	Description
128	Device Reset	A warm start is triggered and the device will be set to an initial state. The communication will be interrupted by the device and then reinitiated by the master.
129	Application Reset	The parameter of the technology-specific application are set to default values. Identification parameter remain unchanged. An upload to the data storage of the master will be executed, if activated in the port configuration of the master.
130	Restore Factory Settings	The parameter of the device are reset to factory settings. Note: A download of the data storage may be executed on the next power cycle and overwrite the factory default settings!
131	Back-to-box	The parameter of the device are set to factory default values and communication will be inhibited until the next power cycle. Note: Directly detach the device from the master port!

164	Calibrate Low Level	Stores the current distance as Low Level reference point
165	Calibrate High Level	Stores the current distance as High Level reference point
167	Set Additional Reference 1	Stores the current distance as additional reference point 1
168	Set Additional Reference 2	Stores the current distance as additional reference point 2
169	Set Additional Reference 3	Stores the current distance as additional reference point 3
170	Set Additional Reference 4	Stores the current distance as additional reference point 4

ISDU Indices

Access Rights: ro - Read Only, rw - Read/Write, wo - Write Only

Name	Index (- Subindex)	Bytes	Access	Values	Description
System Command	2	1	wo	see above	
Identification					
Vendor Name	16	23	ro	CAPTRON Electronic GmbH	
Product Name	18	5	ro	CALIS	
Product Text	20	17	ro	<i>order ID</i>	
Product ID	19	12	ro	CAS-MQEU-M01	

Serial Number	21	13	ro	xxxxxx.xxxxxx	
Hardware Revision	22	4	ro	0001	
Firmware Revision	23	4	ro	V3.x	
Application-specific Tag	24	32	rw		
Function Tag	25	32	rw		
Location Tag	26	32	rw		
Hardware Identification Key	17342	9	ro	A0001001C	
Parameter					
Measurement Configuration					
Overfill warning Distance	333	2	rw	0...1200 [mm]	
Container Teach In					
High Fill Level					
Container High Fill Level	287	1	rw	0...100 [%]	Fill level in percent of High Level reference point.
Distance "High Level"	289	2	rw	0...1200 [mm]	Sensor value for High Level reference point. Will be set to current distance when triggering "Calibrate High Level" command.
Low Fill Level					
Container Low Fill Level	286	1	rw	0...100 [%]	Fill level in percent of Low Level reference point.

Distance "Low Level"	288	2	rw	0...1200 [mm]	Sensor value for Low Level reference point. Will be set to current distance when triggering "Calibrate Low Level" command.
Additional Reference Point 1					
Level	328 - 1	1	rw	-1 - not set 0...100 [%]	Fill level in percent of for optional additional reference point 1.
Distance	328 - 2	4	rw	0 - not set 1...1200 [mm]	Distance for optional additional reference point 1.
Additional Reference Point 2					
Level	329 - 1	1	rw	-1 - not set 0...100 [%]	Fill level in percent of for optional additional reference point 2.
Distance	329 - 2	4	rw	0 - not set 1...1200 [mm]	Distance for optional additional reference point 2.
Additional Reference Point 3					
Level	330 - 1	1	rw	-1 - not set 0...100 [%]	Fill level in percent of for optional additional reference point 3.
Distance	330 - 2	4	rw	0 - not set 1...1200 [mm]	Distance for optional additional reference point 3.
Additional Reference Point 4					
Level	331 - 1	1	rw	-1 - not set 0...100 [%]	Fill level in percent of for optional additional reference point 4.
Distance	331 - 2	4	rw	0 - not set 1...1200 [mm]	Distance for optional additional reference point 4.
Pin 4 Configuration					

Pin 4 Function	316	1	rw	0 - NPN 1 - PNP 2 - PushPull	<i>NPN</i> : Output signal is pulled down to 0V when output is on. <i>PNP</i> : Output signal is pushed up to +VDC when output is on. <i>PushPull</i> : Output signal is pushed up to +VDC when output is on and is pulled down to 0V when it is off.
Output Function	319 - 1	1	rw	0 - NO (Normally Open) 1 - NC (Normally Closed)	<i>NO</i> : Output will close when fill level is above set point. <i>NC</i> : Output will open when fill level is above set point
Output Set Point	319 - 2	1	rw	0...100 [%]	Fill level above which Output will switch ON. With a value of 100%, Output will never switch on.
Output Hysteresis	319 - 3	1	rw	0...100 [%]	Output will switch OFF when fill level is below Set Point minus this value.
Output Minimum Impulse Time	319 - 4	4	rw	10...300000 [ms]	The minimal time (ms) the output signal will toggle when set or reset point is crossed.
LED					
LED Brightness	285	1	rw	1...100 [%]	Brightness of LED in percent.
Observation					
Supply Voltage	256	2	ro	0 ... 65535 [0.001 V]	
Sensor Temperature	257	2	ro	-32768 ... 32767 [0.1 °C]	
Diagnosis					
Device Status Information					

Device Status	36	1	ro	0...4	Device Status according to IO-Link Specification B.2.20
Detailed Device Status	37	24	ro		Device Status according to IO-Link Specification B.2.21
Error Code	282	2	ro	0 ... 65535	See section <i>Self-Diagnosis and Errors</i> below
Charge Code	280	4	ro	0 ... 4294967295	

Self-Diagnosis and Errors

CALIS Level Sensors include the following diagnosis features.

- Monitoring of Supply and internal Voltages and MCU Temperature
- Overload Detection on digital and analog outputs.

Blink Code	IO-Link Error Code	Description
1	0x0001	internal error
2	0x0002	Error with intermediate voltage
4	0x0008	Supply voltage overrun / underrun
5	0x0010	Container overflow Sensor error
8	0x0080	Parameter memory error
9	0x0100	Parameter error
12	0x0800	LED error
13	0x1000	overload on digital output
15	0x4000	Temperature overrun

References

- IO-Link Interface and System Specification V1.1.3
https://io-link.com/share/Downloads/Package-2020/IOL-Interface-Spec_10002_V113_Jun19.pdf

Revision History

Rev. A – 2024-12-19

- Initial version

Legal notice

The information on sensors, sensor buttons, devices, applications, and software contained in this document is for informational purposes only and may be superseded by updates at any time. It is your responsibility to ensure that your applications conform to your specifications.

CAPTRON makes no representations or warranties, express or implied, with respect to the information, including but not limited to its content, condition, quality, and fitness for a particular purpose. CAPTRON disclaims all liability arising from this information and its use.

The use of CAPTRON sensors, sensor buttons, devices, applications, and software in life support and/or safety applications is solely at the risk of the purchaser, who agrees to defend, indemnify, and hold harmless CAPTRON from any and all damages, claims, suits, or expenses resulting from such use.

Unless otherwise stated, no licenses to CAPTRON's intellectual property rights, implied or otherwise, are transferred.

Trademark

The CAPTRON name and logo, CANEO and oneGRID are registered trademarks of CAPTRON in various countries and are the property of CAPTRON Electronic GmbH.

All other trademarks mentioned herein are the property of their respective owners.

© 2022, CAPTRON Electronic GmbH, all rights reserved.

For any questions on our products, please contact

CAPTRON Technical Support team
phone: +49 8142 44 88 - 160
e-mail: sales@captron.com

CAPTRON Electronic GmbH
Johann-G.-Gutenberg-Str. 7
82140 Olching
Germany

www.captron.com